ALPINE
Mobile Media Solutions

PND-K3

Portable Navigation System

QUICK REFERENCE GUIDE

IMPORTANT INFORMATION

WARNING

This product is designed to assist you while you drive your vehicle. It should not be used as a substitute for your personal judgment. Road conditions and regulations take precedence over information contained on the map display; observe actual traffic restrictions and circumstances while driving. For safety, users should stop vehicle before operating the system.

Please read the complete Owner's Manual before operating this product; please see Page 10 of this Quick Reference Guide for instructions on accessing the Owner's Manual.

INSTALLATION NOTE

Certain state and local regulations may prohibit the placement of any object on windows or the dash. See your authorized Alpine dealer for other installation options.

MAPS

All map coverage includes only roads and regions that have been mapped in a digitized format.

Product information listed in this brochure is based upon current information at the time of printing, but cannot be guaranteed. All designs, features, specifications and delivery dates are subject to change without notice. For updated product information, please visit www.alpine-usa.com or www.alpine-canada.com | ©2008 Alpine Electronics, Inc. All rights reserved.

INSTALLATION

AVANT DE COMMENCER

Avant de commencer, rechargez le PND-K3 pendant au moins trois heures, à l'aide du chargeur c.a. fourni.

COMMENT INSTALLER LE PND-K3

1 Trouvez un emplacement convenable pour l'appareil de navigation. Collez la ventouse à l'emplacement de montage désiré. Appuyez sur le levier pour fixer la ventouse.

2 Placez l'appareil de navigation sur le socle.

3 Poussez délicatement jusqu'à ce qu'un son soit entendu et que l'appareil soit verrouillé en place.

COMMENT RETIRER LE PND-K3

1 Appuyez sur le bouton situé directement à l'arrière de l'appareil de navigation. Cela provoquera le relâchement de l'appareil vers l'avant. Soulevez délicatement l'appareil de son socle.

> PRIMARY BUTTON CONTROLS

POWER
Press and hold for two seconds to turn on/off the device.

SD CARD SLOT
For music playback. (SD card not included.)

HEADPHONE JACK
(Headphone not included.)

MINI-USB CONNECTOR

RESET BUTTON
Press and hold for two seconds (if necessary).

VOLUME DOWN
Controls audio volume level down.

VOLUME UP
Controls audio volume level up.

MAIN MENU

"GO TO" BUTTON
Press this to start entering a destination.

"PLAY" BUTTON
Press this to go to the music player.

"SETTINGS" BUTTON
Press this to change system settings.

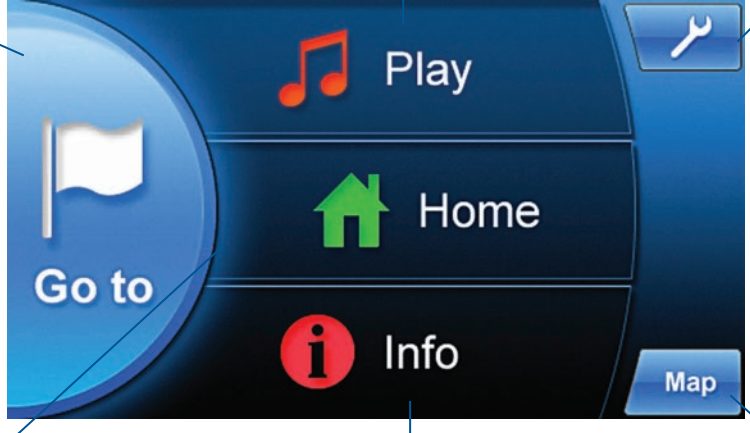

"HOME" BUTTON
Press this to go to a saved home location.

"INFO" BUTTON
Press this to check information such as:
- GPS receiver status
- Speed and trip information

"MAP" BUTTON
Press this to go to the map.

Type in a new address.

Select from recent destinations.

Select from saved destinations.

More options (setting destination using coordinates or by intersection).

Search by entering street name.

Search by entering city name.

Select from recent streets.

Select from recent cities.

Search from a list of places (restaurants, ATMs, gas stations, etc.).

Search near current location.

Search near destination.

Search within a city.

Search along current route.

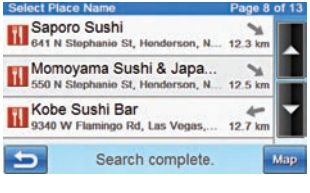
Select Place Name
Page 8 of 13
Saporo Sushi
641 N Stephanie St, Henderson, N... 12.3 km
Momoyama Sushi & Japa...
550 N Stephanie St, Henderson, N... 12.5 km
Kobe Sushi Bar
9340 W Flamingo Rd, Las Vegas,... 12.7 km
Search complete.
Map

> POINT OF INTEREST (POI) KEYWORD SEARCH

Don't know the full POI name? Instead, type in what you know or need and find relevant results. This search method returns POI names containing — not necessarily beginning with — the search term.

MAP WITHOUT GUIDANCE

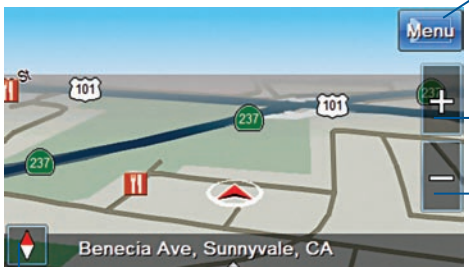

Goes back to Main Menu screen.

Zooms Map View in.

Zooms Map View out.

Changes map view (2D, 3D).

MAP WITH GUIDANCE

Press to repeat voice guidance.

Press to view Route Menu.

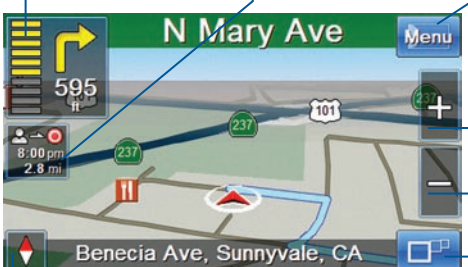

Goes back to Main Menu screen.

Zooms Map View in.

Zooms Map View out.

Change navigation mode to arrow only mode.

Changes map view (2D, 3D).

SET UP BLUETOOTH

1 Access the Settings menu.

2 Press the Down Arrow to access page two of the Settings menu.

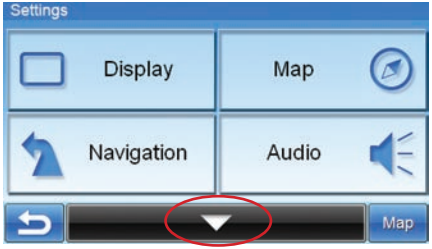

3 Enter the Bluetooth setup screen.

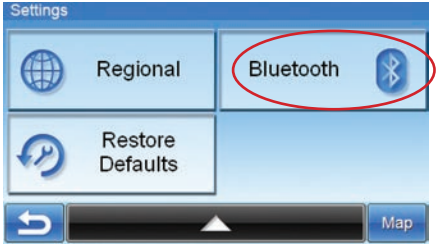

4 Select 'Bluetooth Devices…'.

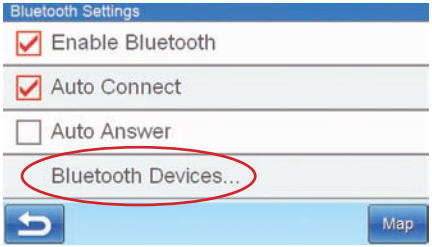

5 Select 'Discoverable Mode'.

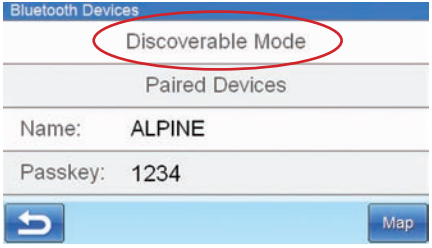

6 On the Bluetooth enabled mobile phone, search for Bluetooth devices.

7 Once the PND-K3 is found on the mobile phone, connect to the PND-K3.

ACCESS SOFTWARE AND/OR MAP UPDATES

Software and/or map updates can be accessed by connecting the PND-K3 to a PC. The PND-K3's Owner's Manual can also be accessed the same way (internet connection required for either function).

1. Turn on the PND-K3.
2. Connect the PND-K3 to the PC using the provided USB cable.

3. Open "My Computer" on the PC. Click the "Alpine Update" icon that appears.

4. Follow the on-screen instructions.

Software Update: When a software update is available, this button will be active. Follow the on-screen instructions to access the software update.

View Owner's Manual.

- Periodic software and/or map updates will be available. Some may require an additional fee, please refer to the on-screen instructions.

CHANGE THE BACKGROUND COLORS

There are eight menu colors and eight map colors to choose from.
Select “Display” from the Settings menu to change your color scheme.

Press to return to the previous color scheme.

Press to advance to the next color scheme.

MUSIC PLAYER

The PND-K3 is not only a navigation device, it's also a music player! Choose "Play" from the Main Menu, then just place an SD card with your favorite music into the PND-K3. It's that simple!

Once music is playing, click and drag to skip to anywhere in the song.